

# Sony Re-tuning Guide

# Guide 1

This guide can be used in conjunction with your remote control to help you retune any of the following Sony Products.

## Models covered:

KDL22E5300U	KDL37V5500U	KDL40W5710U	KDL46WE5WU	KDL40V5810U
KDL22E5310U	KDL40V5500U	KDL40W5740U	KDL40Z5500U	KDL40W5810U
KDL32E5500U	KDL46V5500U	KDL46W5500U	KDL46Z5500U	KDL40Z5800U
KDL32E5510U	KDL52V5500U	KDL46W5710U	KDL52Z4500U	KDL46V5810U
KDL32E5520U	KDL32W5500U	KDL46W5740U	KDL52Z5500U	KDL46W5810U
KDL40E5500U	KDL32W5710U	KDL52W5500U	KDL32V5810U	KDL46Z5800U
KDL40E5510U	KDL37W5500U	KDL40WE5BU	KDL32W5810U	KDL52V5810U
KDL40E5520U	KDL37W5710U	KDL40WE5WU	KDL37V5810U	KDL52W5800U
KDL32V5500U	KDL40W5500U	KDL46WE5BU	KDL37W5810U	KDL52Z5800U

Sony Website: [www.sony.co.uk](http://www.sony.co.uk)



Sony Helpline: 0844 8466555

Digital UK Website: [www.digitaluk.co.uk](http://www.digitaluk.co.uk)

Digital UK: 0845 6505050



**SONY**

1.

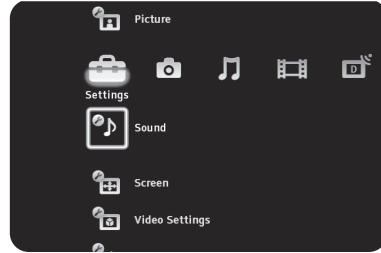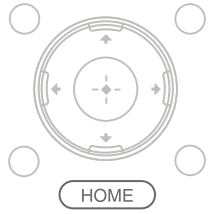



Press "HOME" on the remote.

2.

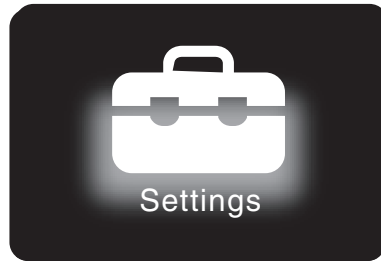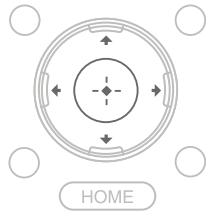



Using the ←/→ to select "Settings".

3.

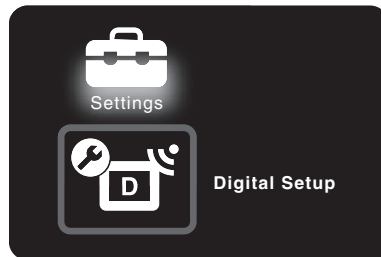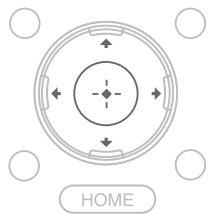



Press ↑/↓ to select "Digital Set-Up", then press ⊕.

4.

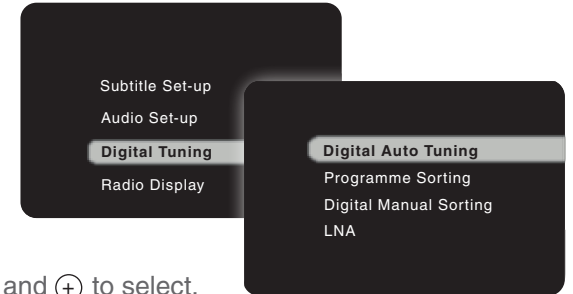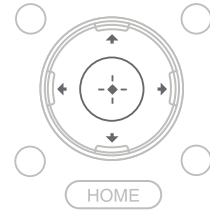


Use ↓ to select "Digital Tuning" and ⊕ to select. Press ⊕ to select "Digital Auto Tuning".

5.

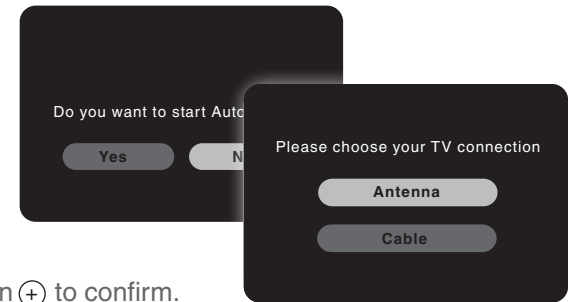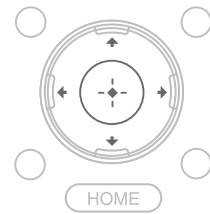


Press ← to select "Yes" and then ⊕ to confirm. Press ↑ to select "Antenna", then ⊕ to confirm.

6.

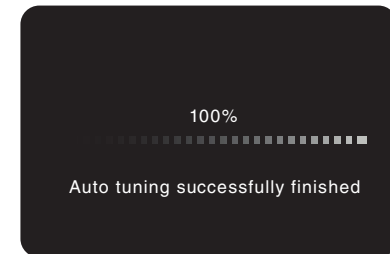

The TV will automatically start tuning and confirm when finished.

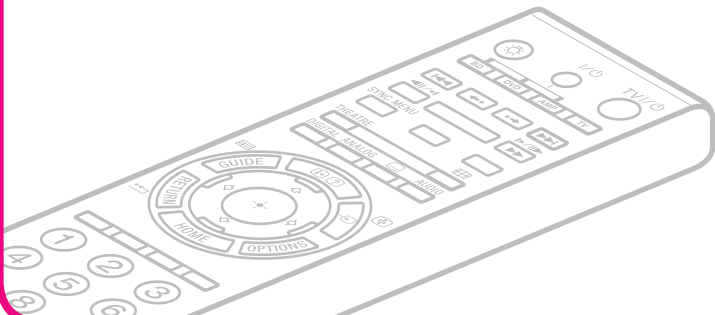

Please note some TV models the remote control layout may differ to the one illustrated.