

Guide 1

Sony TV Manual Re-tuning

Models Covered by this Guide:

KDL22E5300U	KDL32W5810U	KDL40V5500U	KDL40Z5800U	KDL46Z5500U
KDL22E5310U	KDL37V5500U	KDL40V5810U	KDL46V5500U	KDL46Z5800U
KDL32E5500U	KDL37V5810U	KDL40W5500U	KDL46V5810U	KDL52V5500U
KDL32E5510U	KDL37W5500U	KDL40W5710U	KDL46W5500U	KDL52V5810U
KDL32E5520U	KDL37W5710U	KDL40W5740U	KDL46W5710U	KDL52W5500U
KDL32V5500U	KDL37W5810U	KDL40W5810U	KDL46W5740U	KDL52W5800U
KDL32V5810U	KDL40E5500U	KDL40WE5BU	KDL46W5810U	KDL52Z4500U
KDL32W5500U	KDL40E5510U	KDL40WE5WU	KDL46WE5BU	KDL52Z5500U
KDL32W5710U	KDL40E5520U	KDL40Z5500U	KDL46WE5WU	KDL52Z5800U

If you are comfortable with technical information and your “auto re-tune” hasn’t worked, you can use this “Manual Re-tuning Guide”. However If you find manual retuning too difficult please contact your local electrical retailer or installer.

If your TV receives a different regional service to your preferred service, (for example BBC England instead of BBC Scotland or ITV Central instead of ITV Anglia) you can use this manual retune guide to select your preferred regional service.

Step 1

Before commencing any manual retuning please ensure the desired stations are not already store in the 800’s (Typically preset 801 (BBC) and 803 (ITV)). If your preferred stations are in the 800’s then add them to your “favorite stations” or perform a “Program Sort” (Please refer to your handbook or download it from the support section of www.sony.co.uk)

Step 2

Before you start you need to obtain and take a record of the channel numbers for your area, this can be identified by using the Digital UK website – www.digitaluk.co.uk/manualretuning where you simply input your postcode and house number, then you will be given numbers between 21 and 68 for Group 1 to Group 6 -

Write down the UHF channel numbers of your transmitter using the “Group” boxes here


Group 1	<input type="text"/>	Group 4	<input type="text"/>
Group 2	<input type="text"/>	Group 5	<input type="text"/>
Group 3	<input type="text"/>	Group 6	<input type="text"/>

To prevent the product from overriding your manual retune you have to turn “Off” the automatic station update which is called “Auto service update” (This selects the best quality signal rather than your preferred station).


Step 3 – Disable “Auto Service Update”





The design and layout of the remote control can vary

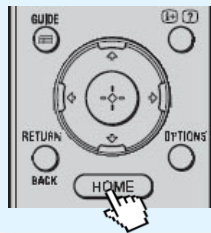



1) Press the blue button which will be called “MENU” or “HOME”

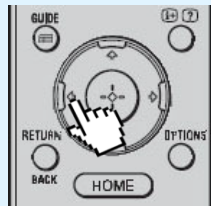



2) Using the “←” arrow highlight “Settings”

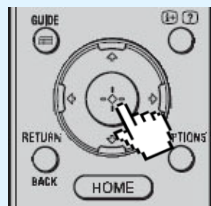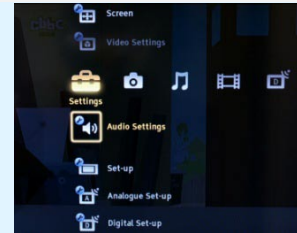


3) Using the “↑↓” arrows highlight “Digital Set-up” then press (+)

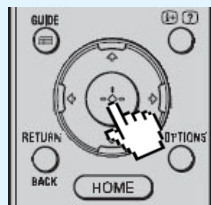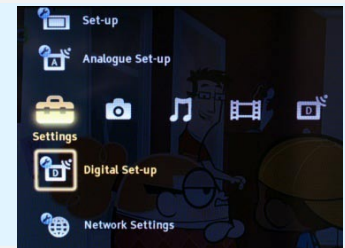

4) Using the “↑↓” arrows highlight “Technical Set-up” then press (+)

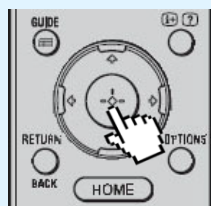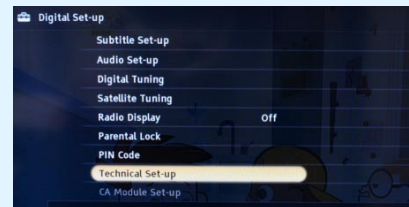

5) Press (+) to confirm “Auto Service Update” Using the “↑↓” arrows highlight “Off” then confirm by pressing (+)

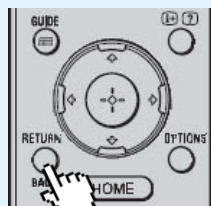

6) Press the “RETURN” then go to “Step 4” on the next page



Sony Helpline: 0844 8466555

Sony Web: www.sony.co.uk/support

Step 4 – Sony Manual Re-tuning




The design and layout of the remote control can vary





1) Use the “**↑↓**” arrow keys to select “**Digital Tuning**” then confirm by pressing **+**





2) Use the “**↑↓**” arrow keys to select “**Digital Manual Tuning**” then confirm by pressing **+**

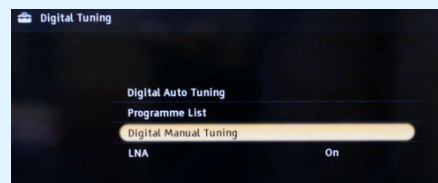


3) Using the number keys on the remote control enter the channel numbers obtained in “**Step 2**”

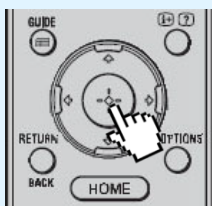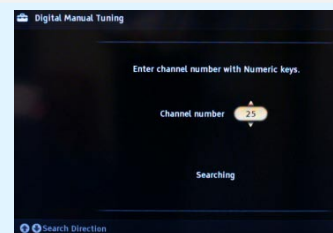

4) Using the “**↑↓**” arrow keys highlight the channel you wish to tune in, then select by pressing **+**, using the “**↑↓**” select where you wish to store this station then confirm by pressing **+**

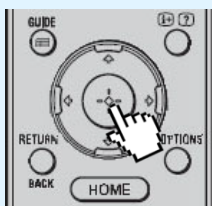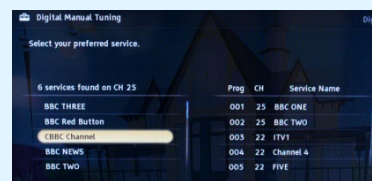

5) Repeat “4)” as necessary for any other stations within this group you wish to change

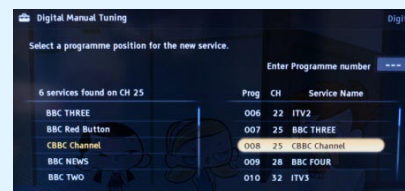

6) Once you have updated the stations in “Group 1” press “**RETURN**” then go back to “3)” and repeat but this time using the channel number for group 23....4 etc.

Step 2
Before you start you need to obtain and take a record of the channel numbers for your area. This can be identified by using the Digital UK website – www.digitaluk.co.uk/manualtuning where you simply input your postcode and house number, then you will be given numbers between 21 and 68 for Group 1 to Group 6 –

Write down the UHF channel numbers of your transmitter using the “Group” boxes here	Group 1	Group 4
	Group 2	Group 5
	Group 3	Group 6

Sony Helpline: 0844 8466555

Sony Web: www.sony.co.uk/support